

Ham 92C - ASV User: Testing
Dr. Marc & Rosemary © 230215

1. Testing a node requires two access points. That is why you set-up two node addresses.
2. AllStarLink does not work with two devices on the same network without multiple servers.
 - a. Use your link address (KI5xxx-L) on the Raspberry.
 - b. Be sure node password on <http://www.AllStarLink.org> Portal is same as on Raspberry.
 - c. The Portal shows registered when the node is on and connectable.
3. Your cellphone can be the test machines, but very specific guides apply.
 - a. Turn-off your Wi-Fi connection and use your cell service.
 - b. Use your other AllStarLink address on your cell.
 - c. Use your cell to call the Raspberry with either a callsign or node number. Click Connect.
4. Use Putty. Login to the Pi.
 - a. Go to **Admin Menu** > 12-ASL Asterisk CLI.
 - b. The black screen displays every function you do on the node, whether outgoing or incoming.
 - c. Check that connections, tones, and levels are working.
5. Life is good. Enjoy!



Not a cellphone

